



SCHEUCHER®

CAREboy

OPERATING INSTRUCTIONS

Multifunctional cordless waxer and cleaner



CONTENT

SPECIFICATION AND PRECAUTIONS.....	04-04
PRODUCT DESCRIPTION	05-05
ASSEMBLY INSTRUCTIONS.....	06-06
OPERATING INSTRUCTIONS.....	07-08
TROUBLESHOOTING.....	09-09
TIPS & FAQ	10-10

PACKAGE CONTENTS:

- 1x **CARE**boy
- 1x Charger Europe 230 V
- 1x Measuring cup
- 2x Pads Green - for Scheucher **PARQUET CARE**
- 2x Pads Blue - for Scheucher **PARQUET CLEANER**
- 1x Manual in German and English

Further information on care and cleaning as well as care instructions can be obtained from your dealer or online at www.scheucherparkett.at.



TAILORED CARE. DURABLE FLO_R.

With **CARE**boy from Scheucher you will experience an absolutely comfortable way of innovative and efficient cleaning and care of your oiled/waxed parqued floor. It is a multifuncional, cordless waxer and cleaner for the routine use together with our compatible products Parquet Care and Parquet Cleaner.

This specially developed range of cleaning and care products enhances the natural hues of your wooden floor and protects as well as preserves the beautiful sheen and individual character of the wood.

HAVE FUN USING YOUR NEW CAREBOY!



Specifications & Precautions

SAFETY PRECAUTIONS.

This product is only intended to be used for cleaning and care of floors.
Operating errors or improper handling are in the responsibility of the user.
Only suitable for even surfaces such as parquet, wooden floors, stone, tile, laminate, vinyl floors or similar.
Do not use on walls or windows or uneven surfaces.

Do not soak your **CAREboy** in water or other liquids. Clean it with a damp cloth solely.
Do not touch rotating parts during operation.

Fix your cleaning or waxing pads on the rotating plates before use, make sure they are used under appropriate circumstances.
Only use recommended care and cleaning products . Other products on your own risk and responsibility.

Please fill the tank with clear water after each use and empty completely by using the spray button to clean the tank, pipes and nozzles!

Do not fill in any liquids containing solvents.
Empty and dry the water tank if you do not use your **CAREboy** for a longer time.

Only charge the device with the original adapter, at least once every six months, to prevent a deep discharge of the battery.

When using your **CAREboy**, make sure that the angle between the machine handle and the ground level is within 80 degrees.



SPECIFICATIONS

Model	:	MOPA580
Rated voltage	:	14,6 V
Rated power	:	60 W
Noise Level	:	60 dB
Battery capacity	:	2600 mAh Lithium
Charging time	:	2,5 hours
Working time	:	> 35 min
Water tank	:	300 ml
Dimensions	:	122 x 39 x 8,5 cm
Net weight	:	3,2 kg



CAREboy

FLOOR CLEANING EXPERT

Handle

Indicator light

Battery compartment AAA

Spray button

Start / Stop button

Extendable aluminium tube

Lock button

- + cordless battery mode
- + minimum consumption of water
- + controlled spraying quantity
- + easy and innovative cleaning & care
- + with LED lighting for dark areas
- + dual drive
- + low-noise

 300 ML

Water filling

Water tank

Detachable battery pack

Power switch
ON / OFF

Pads

LED lighting

Spray nozzle



ASSEMBLY INSTRUCTIONS.



Upper side
of the aluminium tube

Push the thin end of the tube into the upper handle until the locking stud snaps into place.

Bottom side
of the aluminium tube

Push the lower part of the tube into the joint of your CAREboy until the locking stud snaps into place again.

Your Careboy is ready now.



OPERATING INSTRUCTIONS.

1

Choose / change the right pads

Please select the correct pads for cleaning (**BLUE**) or care (**GREEN**) of your oiled / waxed wooden floor and fix them to your **CAREboy** by using the velcro fastener. Use only original pads - these were specially designed for the optimum use on parquet floors.

When removing or changing used pads, turn off the power and take them off the velcro. Wash cleaning and polishing pads immediately after use, so they are ready for the next application right away. You can wash them with up to 60 °C in your washing machine. For the next use put the new pads with the felt side on the velcro again.

2

Add water / detergent / waxing oil

Remove the rubber plug and fill the water tank with cleaning or care agent by means of the measuring cup. For the care of your oiled / waxed parquet floor, fill pure Scheucher **PARQUET CARE** into the tank. To clean your parquet floor, pour in diluted Scheucher **PARQUET CLEANER** according to the instructions.

Close the plug and if necessary, clean excess quantities with an absorbent cloth. Make sure that the pump does not run dry. Therefore, pour some water into the tank after cleaning or waxing, clean the nozzle with a few sprays of clear water and then empty the tank again!

3

Power Switch ON / OFF

If you slightly press the power switch using your foot, the LED lights will turn on and you can start using your **CAREboy**. To turn off your **CAREboy**, press the same button till LED lights turns off. **CAREboy** is off now.

STAND-BY MODE

If you leave your **CAREboy** in a standby mode for more than 10 minutes, it automatically switches into a sleep mode. Press the power switch twice now to reactivate it and continue your activity afterwards.

4

START / STOP button, spray button

Press the start / stop button to start waxing / mopping.
Press the spray button to spray water, detergent or waxing oil onto your floor.

REMARKS:

If you press the start / stop or the spraying button, the handle indicator light should light up in red.
If this is not the case, please put some AAA batteries into the battery compartment and restart your **CAREboy**.

OPERATING INSTRUCTIONS.

5

Battery & Charging

Completely charge the battery of your **CARE**boy before using it for the first time. Please only use the original adapter supplied by the manufacturer and charge your **CARE**boy when the battery is low. Four blue lights on the battery indicate the current battery level. The light below the charging connector flashes red while charging and green when your Careboy is fully charged.

Like every other battery, also this battery is subject to slow self-discharge. Therefore it is necessary to charge the battery at least once within six months.

The battery is replaceable - however, only use the removeable battery supplied by the manufacturer. Another one may destroy your machine. Also replace the battery if your CAREboy is only able to work for less than 15 minutes after it has been fully charged. Replacement batteries are available at your Scheucher specialized dealer.

6

Cleaning & care with your Careboy

CLEANING:

Clean the floor with a vacuum cleaner to remove coarse dirt. Fix the blue pads on the rotary plates and fill the water tank with diluted Scheucher **PARQUET CLEANER**. Scheucher **PARQUET CLEANER** is a waterbased cleaner with an integrated care system for a sensitive damp cleaning of parquet floors, leaving a thin oil-protection on your floor after cleaning. Clean your floor by slowing moving your **CARE**boy back and forth. Spray the cleaner on the floor whenever necessary. Work in partial areas. Follow the instructions of Scheucher **PARQUET CLEANER**.

Please fill the tank with clear water after each use and empty completely by using the spray button to clean the tank, pipes and nozzles!

CARE:

Clean the floor as described above. Change the pads and choose the green and absolutely clean ones now. Empty the tank and fill in a pure amount of Scheucher **PARQUET CARE**. This is a waterbased oil care for the simple and regular maintenance of your oiled / waxed parquet floor. It is VOC-free and fast drying. Spray care on to your floor and polish it by slowly moving your **CARE**boy back and forth again - work in partial areas. Polish as long as no more wet residues are visible. Scheucher **PARQUET CARE** should only be noticeable as a damp film - avoid a visible, wet oil film on your parquet floor.

Attention: If the amount of care oil is too high, the drying time will extend and the parquet floor may become slippery and cause danger. Follow the instructions of Scheucher **PARQUET CARE**.

Please fill the tank with clear water after each use and empty completely by using the spray button to clean the tank, pipes and nozzles!

Please observe the spray distance to avoid contamination of walls or furniture at both applications. Always clean the floor before you treat it with **PARQUET CARE**.



TROUBLESHOOTING.

Problem	Causes	Solution
LED indication works well, no reaction when pressing Start / Stop button, spray button, machine doesn't work	AAA-Batteries run out	Replace the batteries in the battery compartment on the handle
Failure when spraying	Lack of liquid	Fill the tank as described
	Air has got into the pipe	Press the spray button a few times to allow air to escape
Nozzle is blocked	Something blocks the nozzle, there are hard components contained in the liquid	Clean nozzle with a needle
Nozzle leaks	There are some hard components contained in the liquid	Rinse the nozzle with clean water
One green light on detachable battery works well	Low battery	Recharge battery
LED works well, spraying works well, motors don't work	Overheating protection	Turn off the CAREboy and continue your work after the machine has cooled down
LED is off, failure when spraying, motors don't work, Lights on the battery flicker when the adapter is plugged in	Overcurrent protection	Plug in the device for a few seconds to reactivate it
	Low power	Charge the machine for several seconds unplug it, Recharge asap



Please note:

During prolonged operations, the engine temperature rises. In this case, the overheating protection stops the engine. Turn off your **CAREboy** and allow it to cool down without an external support.

Do not work longer than 20 minutes without interruption.

Do not put extra weight on the **CAREboy**.

If troubles can not be solved according to this manual, please contact your dealer or Scheucher Holzindustrie GmbH at www.scheucherparkett.at!

TIPS + FAQ

To preserve the beautiful look of your parquet floor and protect it's surface please avoid mechanical damages wherever possible. To avoid scratches and serious damages it is recommended to place mats in the entrance area and remove sand and grit with a broom immediately. Equip your movable furniture with felt gliders and use special rolls for wooden floors on office chairs. Do not leave any wet items on your parquet floor. To assess results properly, try out care and/or cleaning procedures in an inconspicuous place before applying the product. Do not use strong alkaline cleaners or acids, they can irreversibly discolour your wood.

Wood as a natural material reacts more sensitively to changes of the relative humidity than to changes of temperature. Therefore the key to success lies in the observance of an optimum relative humidity of your indoor air. This generally requires periodic cleaning and the maintenance of your floor as well as an appropriate air humidification in the heating season. We therefore recommend cold humidifiers with an integrated sterilization system.

HOW DO I CLEAN MY PADS?

Wash pads with clear water after cleaning your floor. If heavily soiled, put the pads into your washing machine and wash at max. 60 ° C. Wash your green pads immediately after each treatment with parquet care to prevent the risk of a spontaneous combustion. You can also wash them at max. 60 ° C in the washing machine. This way they are also immediately ready for use at the next time.

WHERE CAN I BUY PADS, BATTERIES OR CARE AND MAINTENANCE PRODUCTS?

Please shop at our local dealers. A list can be found online at www.scheucherparkett.at.

IS MY CAREBOY ABLE TO REMOVE DUST AND DIRT?

The pads have a high dirt absorption capacity.

The removal of large and coarse dirt particles should still be done with a vacuum cleaner at any time.

CAN I CARRY OUT AN INITIAL CARE WITH MY CAREBOY?

You receive a ready-to-use Scheucher® parquet floor and your **CAREboy** is designed for its routine cleaning and care. Nevertheless, for the long-term value preservation of your floor, an initial care after installation is highly recommended in order to once again protect all of the edges against moisture intrusion. An initial care cannot be carried out with a **CAREboy**, but preferably by your foorer with our professional care wax oil.

CAN I USE SCHEUCHER PARQUET CLEANER PURE?

No, it is a highly concentrated cleaning agent that can only be applied diluted with water at the ratio of at least 1:100.

CAN I POUR OTHER LIQUIDS / DETERGENTS INTO THE WATERTANK OF MY CAREBOY?

Yes, it is your **CAREboy** - but only at your own risk. Any solvent-borne product will destroy your **CAREboy's** nozzle. Only Scheucher Parkett CARE and CLEANER are approved by Scheucher to use it together with your **CAREboy**.

HOW LONG DOES THE BATTERY LAST?

When fully charged, approx. 30 - 40 minutes. This usually suffices for an area of approx. 40 - 50 m² (that's equivalent to 1 bottle of Scheucher **PARQUET CARE**).

DO I HAVE TO CLEAN THE FLOOR BEFORE I TREAT IT WITH PARQUET CARE?

Yes, a cleansing has to be carried out before each care, cause you are applying a protective layer that has to be free from dust and dirt.
